



Multi-VRF Centralized Controller

Owner's Manual

Commercial Air Conditioners

Model:

CE53-24/F(C)

- Thank you for choosing Air Conditioners, please read this owner's manual carefully before operation and retain it for future reference. If you have lost the Owner's Manual, please contact the local agent or visit www.gree.com or send email to global@gree.com.cn or electronic version.
- GREE reserves the right to interpret this manual which will be subject to any change due to product improvement without further notice.
- GREE Electric Appliances, Inc. of Zhuhai reserves the final right to interpret this manual.

User Notice

- ◆ All indoor units must be supplied with unified power.
- ◆ Make sure communication cord is connected with the proper port, otherwise there may occur communication malfunction.
- ◆ Never knock on, throw or frequently detach the centralized controller.
- ◆ Never operate the centralized controller with wet hands.
- ◆ Never scratch the screen of centralized controller by hard or sharp objects.
- ◆ If the centralized controller is connected with the outdoor network or the last indoor unit of the indoor network, then a matching resistance must be connected between G1 and G2 ports.
- ◆ All photos in this manual is only for reference, please refer to the actual product for the final effect.

Contents

1	INSTALLATION.....	1
1.1	Installation Requirements	2
1.2	Wiring Instructions	3
1.3	Wiring Instructions	7
1.4	Removal Procedure	8
2	DISPLAY AND WORKING INSTRUCTIONS	9
2.1	Main Page Display and Buttons	9
2.2	General Buttons	10
2.3	Buttons Working Instructions	10
3	FUNCTIONS DESCRIPTION	12
3.1	All ON/OFF	12
3.2	Single Unit Control	12
3.3	Water /Floor control	15
3.4	e-Control Function.....	20
3.5	Group Control.....	21
3.6	Schedule Management	23
3.7	Local Setting.....	25
3.8	Engineering Setting.....	27
3.9	Operation Notice	28

1 INSTALLATION

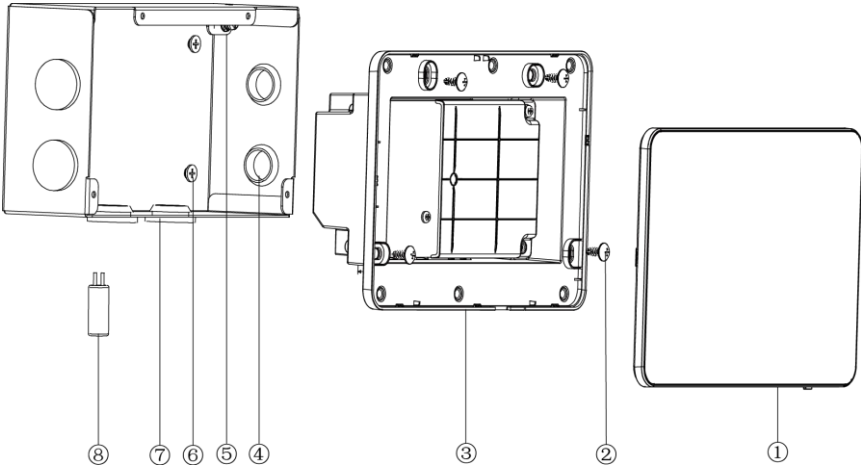


Fig.1.1 Parts of Centralized Controller

No.	①	②	③	④
Name	Touch screen	Self-tapping screw ST4.2×9.5 MC (used to secure the rear cover of controller)	Rear cover of controller	Rubber band
QTY	1	4	1	6
No.	⑤	⑥	⑦	⑧
Name	Screw M4×12 (used to secure ground wire)	Screw ST4.2×16 FA (used to secure electric box cover)	Electric box cover	Matching resistance
QTY	1	4	1	1

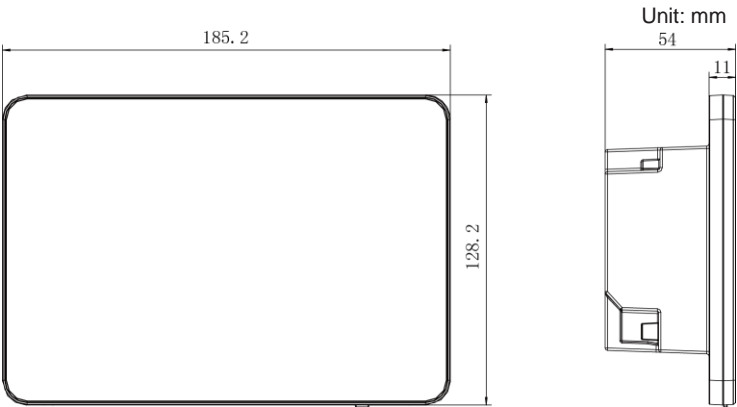


Fig.1.2 Dimension of Centralized Controller

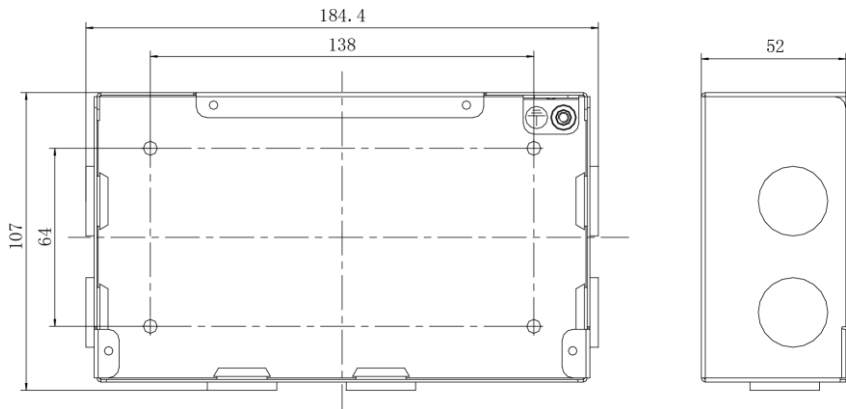


Fig.1.3 Dimension of Electric Box Cover

1.1 Installation Requirements

(1) Communication cord of the centralized controller must be selected according to the table below. Never use the cable that is not in compliance with instructions of this manual.

Network	Cord type	Cord standard	Cord size (mm ²)	Total length L(m)	Remark
Indoor network	Light/Ordinary polyvinyl chloride sheathed cord. (60227 IEC 52 /60227 IEC 53)	IEC 60227-5:2007	$\geq 2 \times 0.75$ ($\geq 2 \times \text{AWG18}$)	$L \leq 1000\text{m}$ ($L \leq 3280\text{-}5/6\text{feet}$)	1. If the wire diameter is enlarged to $2 \times 1 \text{ mm}^2$ ($2 \times \text{AWG16}$), the total communication line length can reach 1500 m (4921-1/4feet).
Outdoor network					2. The cord shall be Circular cord (the cores shall be twisted together). 3. If unit is installed in places with intense magnetic field or strong interference, it is necessary to use shielded wire.



Notice:

- ① The cord shall be Circular cord (the cores shall be twisted together).
- ② If unit is installed in places with intense magnetic field or strong interference, it is necessary to use shielded wire.

(2) Never install the centralized controller in the following places:

- 1) Places with corrosive gas or serious dust, salt mist or oil smoke.
- 2) Wet and damp places, with direct sunlight
- 3) Places near high temperature objects or places where units might be splashed by water.

1.2 Wiring Instructions

(1) Wiring Ports

Port print	G1, G2	F1, F2	A2, B2	A3, B3	L, N
Meaning	CAN comm. port	【reserved port】	【reserved port】	【reserved port】	Power port

(2) Power Supply

The smart centralized controller shall use independent power supply.

The range of input voltage: 100~240 VAC; Frequency range: 50/60Hz

Select power cord according to the following table. Never use the power cord that is not in compliance with instructions of this manual.

Cord type	Cord standard	Cord size (mm ²)
Single-cord soft conductiveunsheathed cord (60227 IEC 08)	IEC 60227-3:2007	1.5

(3) Connection Method

There are three methods to connect centralized controller with the air conditioning system.

Method 1: Connect with indoor network

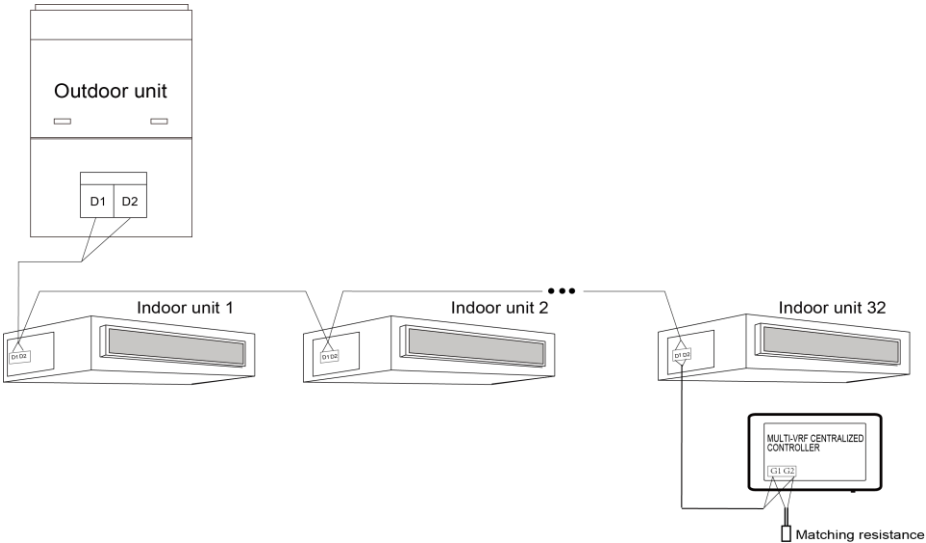


Fig.1.4 Centralized Controller Connected with Indoor Network

Method 2: Connect with outdoor network

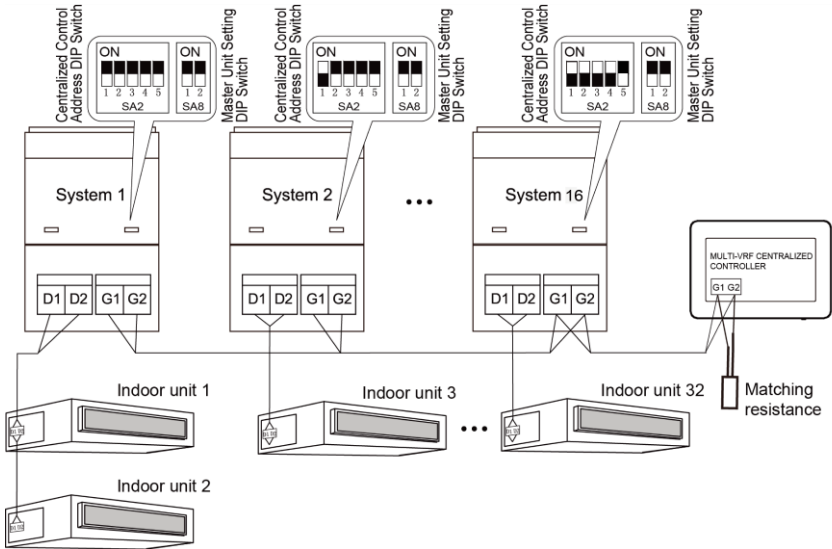


Fig.1.5 Centralized Controller Connected with Outdoor Network

Method 3: Connect with heat recollection mode converter Network

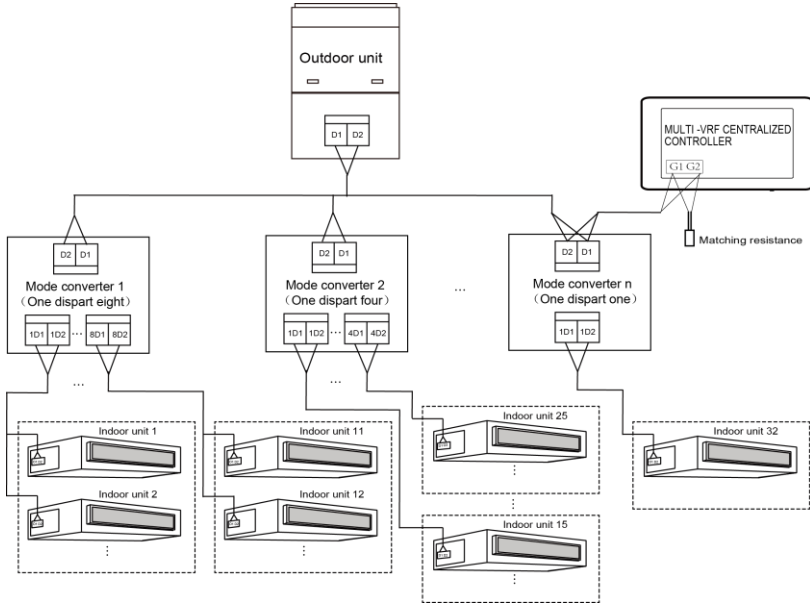


Fig. 1.6 Centralized Controller Connected with Heat Recollection Mode Converter Network

Wiring Instructions:

- ① The smart centralized controller is applicable to multi VRF units, connectable with network of indoor units or the network of outdoor units or mode converter network. One centralized controller can control up to 16 sets of outdoor system and up to 32 sets of indoor unit.
- ② If the centralized controller is to be connected with the network of indoor units, connect according to fig.1.4. The controller can connect with any one indoor unit in series, that is, connect the controller's G1 and G2 ports with the D1 and D2 ports correspondingly with communication cords. When the controller is connected with the terminal unit of indoor network, a matching resistance needs to be added with the communication cords at the G1 and G2 ports.
- ③ If the centralized controller is to be connected with the network of outdoor units, connect according to fig.1.5. The centralized controller can only be connected with the terminal system of the outdoor network. A matching resistance needs to be added with the communication cords at the G1 and G2 ports.
- ④ The centralized control address DIP switch (SA2_Addr-CC) indicates the

centralized control address required when different refrigerating systems are controlled in a centralized manner. The default factory setting is "00000".

- ⑤ If the centralized controller is to be connected with the network of heat recollection, connect according to Fig. 1.6. The method 2 is also applicable to centralized controller switching in heat recollection network.

If the centralized controller is to be connected with the network of outdoor units, set the DIP switch according to the following methods:

- 1) The DIP switch must be set on the master unit and set the Master Unit Setting DIP Switch(SA8) to "00".Otherwise, the setting is invalid.
- 2) On the same refrigerating system, the centralized control address DIP switch (SA2_Addr-CC) on a non-master unit is invalid, and it is unnecessary to change the settings.
- 3) The centralized control address DIP switch (SA2_Addr- CC) on the master unit of a refrigerating system must be set to "0000/", and this system is the master system.
- 4) The centralized control address DIP switch (SA2_Addr- CC) on the master unit of other refrigerating systems must be set as follows:

Note: The centralized control address switch of DIP5 invalidation

SA2					Address NO.
DIP1	DIP2	DIP3	DIP4	DIP5	
1	0	0	0	/	2
0	1	0	0	/	3
1	1	0	0	/	4
0	0	1	0	/	5
1	0	1	0	/	6
0	1	1	0	/	7
1	1	1	0	/	8
0	0	0	1	/	9
1	0	0	1	/	10
0	1	0	1	/	11
1	1	0	1	/	12
0	0	1	1	/	13
1	0	1	1	/	14
0	1	1	1	/	15
1	1	1	1	/	16

- 5) The centralized control address DIP switch (SA2_Addr- CC) cannot be the same between different refrigerating systems. Otherwise, address conflicts

may occur and the unit cannot run properly.

1.3 Wiring Instructions

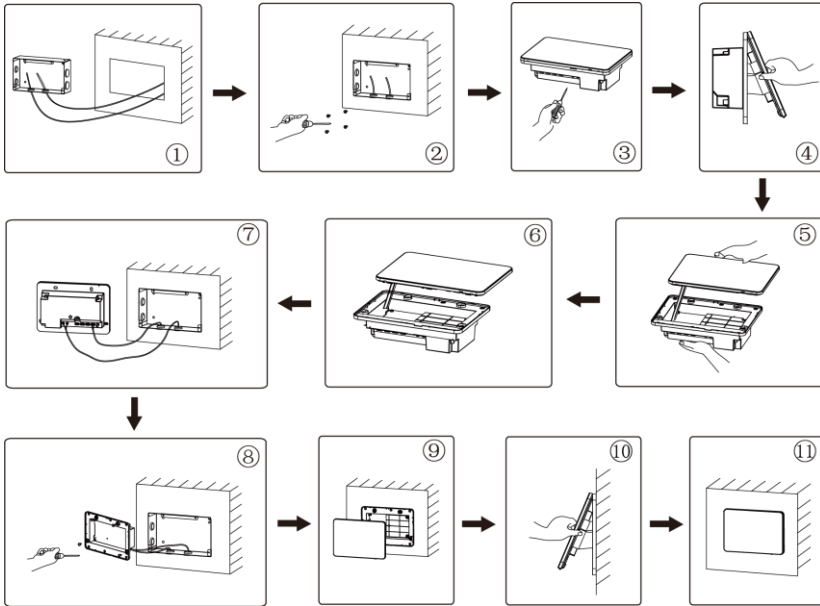


Fig.1.7 Installation Diagram

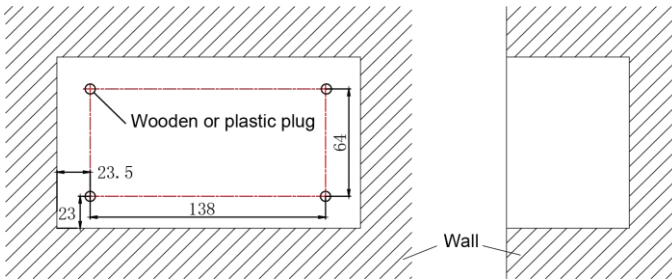


Fig.1.8 Diagram of Wooden or Plastic Plug

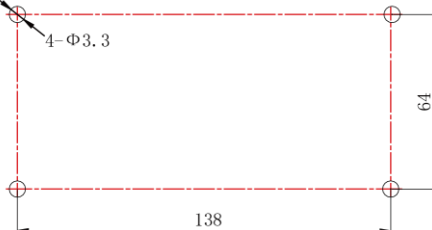



Fig. 1.9 Installation Holes of the Electric Box Rear Cover

Fig.1.7 is a simple installation procedure of centralized controller. Please pay attention to the following matters:

- (1) Before installation, first cut off the power supply of indoor unit. The power must be cut off during the whole installation process.
- (2) During the installation, be careful not to damage to touch screen.
- (3) Before installation, please make the following preparations:
 - 1) In case that the centralized controller is installed on wall, dig a hole that is the size of $180\text{mm} \times 107\text{mm} \times 62\text{mm}$ and peg 4 wooden or plastic plugs on the wall according to fig.1.8.
 - 2) In case that the centralized controller is installed inside the control cabinet, dig 4 installation holes on the surface of the control cabinet according to fig.1.9.
- (4) In step (1), pull out the power core and communication cord, and then lead them separately from the wire orifice of the electric box rear cover. Never lead the cords through a same orifice.
- (5) In step (2), locate the electric box rear cover to the installation holes of the wall with screw $\text{ST4.2} \times 16 \text{ FA}$.
- (6) In step (6), pull out the wire connecting the touch screen and controller's rear cover. Put the touch screen on a safe place.
- (7) In step (7), connect the communication cords to G1, G2 terminals, and connect the neutral wire and live wire to the N, L terminal; connect the ground wire to position  on the electric box rear cover. Secure it with screw $\text{M4} \times 12$.
- (8) In step (8), locate the controller's rear cover onto the electric box rear cover with screw $\text{ST4.2} \times 9.5 \text{ TC}$.
- (9) In step (9), connect the wire between touch screen and controller's rear cover.

1.4 Removal Procedure

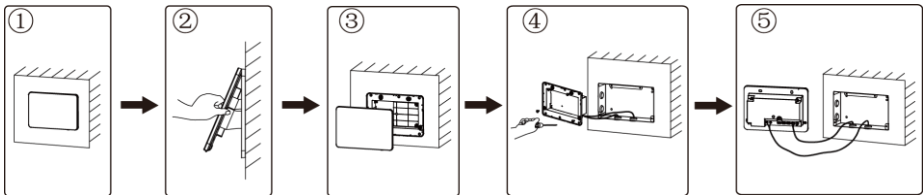


Fig.1.10 Diagram of Removal

2 DISPLAY AND WORKING INSTRUCTIONS

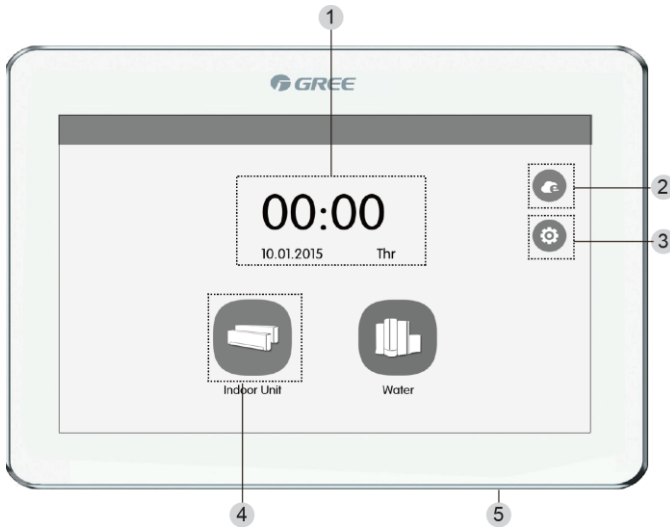
















Fig.2.1 Main Page

2.1 Main Page Display and Buttons

No.	Name	Instructions
①	Time zone	The present date, week and time
②	e-Control button 	Press this button to enter e-Control page
③	Setting button 	Press this button to enter setting page
④	Unit button	Press this button to enter IDU page or Water/Floor page
⑤	Touch button	<ul style="list-style-type: none"> ● Press the Touch Button to turn on/off the screen of centralized controller. ● Press and hold the Touch Button for 5sec to restart to centralized controller.

2.2 General Buttons

Display	Name	Meaning	Display	Name	Meaning
	Return	Press this button to return to the previous page		Cancel	Press this button to cancel the current setting and return to the previous page
	Save	Press this button to save the current setting and return to the previous page		Add	Press this button to add group or schedule
	Edit	Press this button to edit the e-Control,group or schedule		Delete	Press this button to delete group or schedule
	Up	Press this button to increase value or select the previous option		Down	Press this button to decrease value or select the next option
	Group Control	Press this button to enter Group control page		IDU Sort	Press this button to enter IDU sort page
	Add IDU	Press this button to enter Add IDU page		Info	Press this button to enter Info page

2.3 Buttons Working Instructions

The centralized controller uses a capacitive touch screen so that user can operate the units by just touching the screen.

Buttons on the screen are presented in the following ways:

(1) Icon

Icon button can be operated directly. See section 2.2 for more details.

(2) Icon + Text

According to the meaning of Text, turn on or off or select a certain function, or enter a certain page. This type of button has 2 or 3 kinds of status based on the specific function.

Meaning of status (take Sleep Button as an example):



Thin light indicates invalid/not selectable. Sleep function is invalid and can't be selected. Different cases for models.



Light indicates off/not selected. Sleep function is off. Pressing the grey sleep button can turn on the sleep function.



Dark indicates on/selected. Sleep function is on. Pressing the orange sleep button can turn off the sleep function.

(3) Sliding

Sliding left/right or up/down can turn over the page. For example the home page list of indoor units, schedule, etc.

(4) Sliding bar

Press and hold the sliding bar to drag up/down or left/right and to adjust the value. For example the fan speed setting, backlight setting, etc.

(5) Zone button

On the management pages of e-Control functions and schedule, as indicated in fig.2.2 (the home page of schedule), each rectangle frame constitutes a zone button.

Press the zone button, then the turning on/off of corresponding function or the corresponding page will pop in.

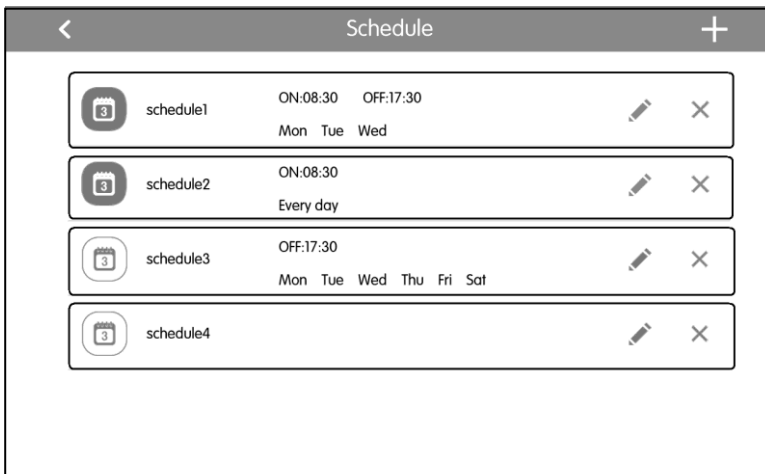


Fig.2.2 Zone Buttons on the Group Control Page

3 FUNCTIONS DESCRIPTION

3.1 All ON/OFF

On the home page, press the “Indoor Unit” button to enter IDU home page, switch to “ALL IDU” option, press the “GroupOFF” button to turn off all indoor units.

Also press the “GroupON” button to turn on all indoor units. Then indoor units will work according to memory.

3.2 Single Unit Control

On the IDU home page, press the icon of indoor unit to enter the single unit control.

Press the icon of indoor unit for 5 seconds to pop up the name set of the selected indoor unit.

Parameters of single unit control include parameters of general control and advanced control.

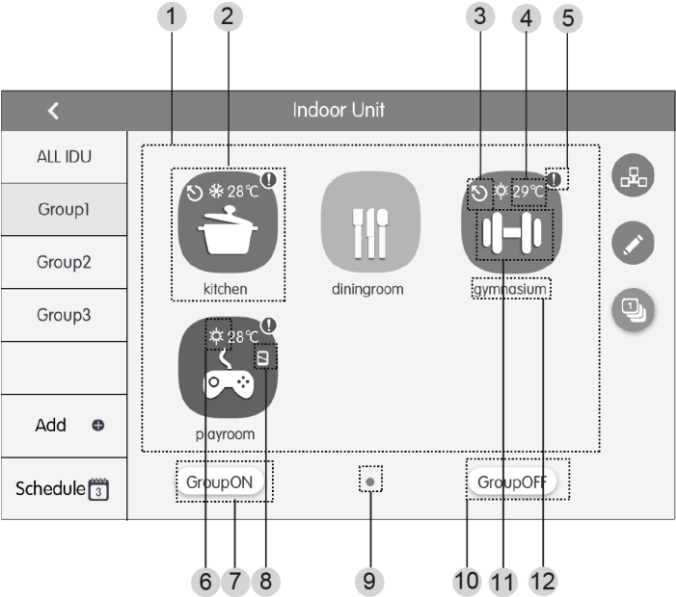










Fig.3.1 Page of IDU home page

No.	Name	Instructions
①	IDU display	Display in separate page the list of indoor units that are controlled by the centralized controller. Sliding left or right can turn over the page.

No.	Name	Instructions
②	IDU icon	<ul style="list-style-type: none">● Press the button to enter the page of indoor unit control.● Light icon indicates that IDU is on while the dark icon indicated that IDU is off.
③	Master IDU	This icon will be displayed when indoor unit is the master indoor unit of the system.
④	Set temperature	When indoor unit is on, set temperature will be displayed here.
⑤	Error status	Error icon will be displayed if indoor unit is malfunctioning.
⑥	Operation mode	When indoor unit is on, the current operation mode will be displayed:  Auto  Cooling  Dry  Fan  Heating  Floor heating  Space heating  3D heating
⑥	Group on button	Press this button to turn on all air conditioning equipment of the group.
⑧	Shield status	This icon will be displayed when indoor unit is in shield status.
⑨	Current page	The total pages of the controlled indoor unit and the current page.
⑩	Group off button	Press this button to turn off all air conditioning equipment of the group.
11	IDU name	Display the name of the indoor unit.
12	IDU icon	Display the icon of the indoor unit.

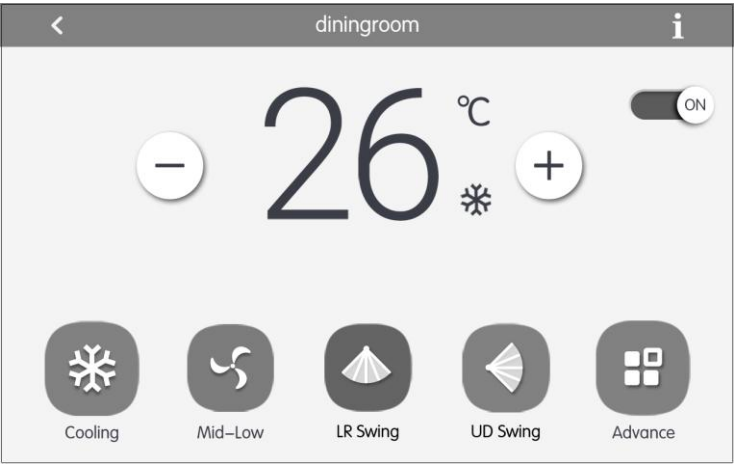


Fig.3.2 Page of Single IDU Control

(1) General Control Parameters

1) On/off

Press the on/off button to turn unit on or off.

When unit is turned off, mode, temperature, fan speed and swing can't be set.

2) Mode setting

Press the Mode buttons to set unit's operation mode.

Modes for indoor units of different series are not all the same.


If a certain mode is not available in the indoor unit, the icon of the corresponding mode cannot be selected.

Note:

- ① Auto mode can only be set in the master indoor unit.
- ② Heat recollection system have no master indoor unit. When the indoor unit of the same branch is connected into one indoor unit, the auto mode can be set; when the quantity of indoor unit in the same branch is more than one set, the auto mode cannot be set; other modes can be freely switched.

3) Temperature setting

Press the up Or down buttons to adjust temperature. Each time pressing the button will increase/decrease the temperature by 1. Holding down the button can increase/decrease temperature continuously.

Pressing the  button can display the "indoor temp" and "outdoor temp".

4) Fan speed setting

Press or drag the fan speed bar to set unit's fan speed.


Note: Unit defaults to low fan speed in dry mode. Fan speed cannot be set in drying or floor heating mode.

5) Swing setting

Pressing the button "Up-Down Swing" or "Left-Right Swing" can turn on or off the swing function.

Note: Swing types for indoor units of different series are not all the same.

6) Malfunction View

When indoor unit fails to function well, press the  button to view the information of malfunctions.

(2) Advanced Control Parameters

Press Advance Button to enter the advance page.

Press icon buttons to turn on or off the corresponding function.

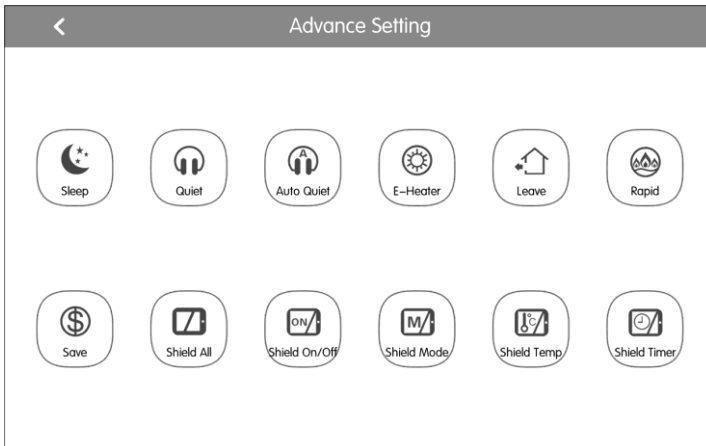




Fig.3.3 Advance Page

- 1) Functions of Sleep, Quiet, E-Heater, Absence and Rapid can only be effective when unit is turned on.
- 2) When sleep function is on, quiet function will be turned on subsequently. Sleep function will not be effective under auto, fan or floor heating mode.
- 3) Absence function can only be turned on in heating mode. When absence function is on, set temperature is 8℃.
- 4) Rapid cool function can only be effective in cool mode. Likewise, rapid heat function can only be effective in heat mode.
- 5) When shield all function is on, other shield buttons will be invalid.

3.3 Water /Floor control

On the water/floor home page, press the icon of water/floor unit to enter the water/floor control interface. Press the icon of water/floor unit for 5 seconds to pop up the name set of the selected indoor unit.

Water/Floor control parameters include water heating control parameter and floor heating control parameter. It can be switched via  Water |  Floor button.

Notes:

- (1) When there is only one function can be selected (water or floor), it can only display the water heating or floor heating function interface, and cannot be

switched to another interface;

- (2) Only when it is connected to hot water generator, water heating and floor heating functions are applicable, the interface can be switched and displaced according to the above instructions;

3.3.1 Water Control Parameter

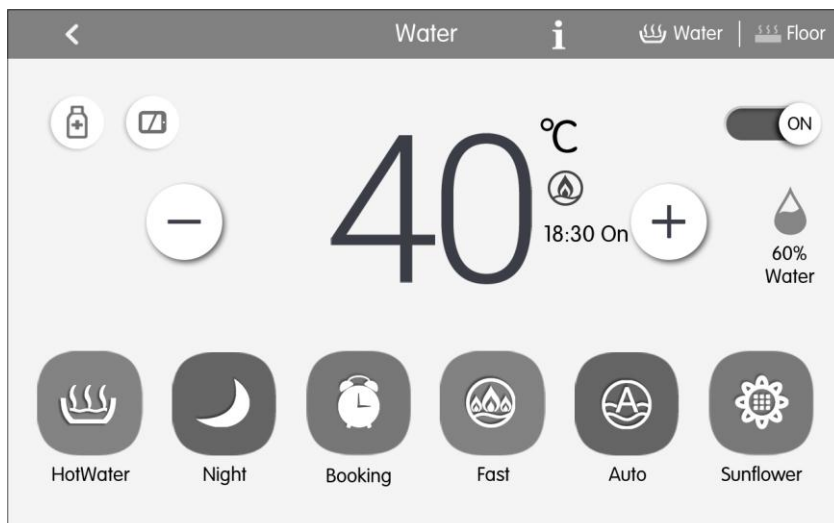


Fig. 3.4 Page of Water heating Control

(1) On/Off

Press the on/off button to turn unit on or off.

When the unit is off, it cannot set the mode, temperature and preset function, while it can set the sterilization function.

(2) Mode Setting

Press the Mode buttons to set unit's operation mode.

There are three modes: HotWater, Booking, Night. These three modes can not be simultaneously conducted, it can only choose one of the modes.



HotWater mode: the water tank or hot water generator will start up or stop heating water according to the current set water temperature.

Booking mode: book the water heating time, the water tank or hot water generator will start up the unit in advance according to the actual water temperature, and will decide the on and off of water tank or hot water generator according to the temperature difference between actual water temperature and the setting water temperature. The

water tank or hot water generator will close down the unit 1~4 hours later after the preset time. Once this mode is set, it will circularly operate every day.

Night mode: the fixed period for providing hot water is from 00:00 to 06:00, the water tank or hot water generator will start up in this period, and will decide the on and off of water tank or hot water generator according to the temperature difference between actual water temperature and the setting water temperature. If it is not within this period, the water tank or hot water generator will close down the unit. Once this mode is set, it will circularly operate every day.

(3) Temperature Setting

It displays the current temperature of hot water as default. The temperature value will turn to the setting temperature and can be adjusted by pressing  and  buttons; the temperature value will increase or decrease by every pressing the button for once. The temperature value will be continuously increased or decreased by long pressing the button. After 5 seconds without any action, the temperature value will turn back to the current temperature.

Under the standard HotWater, Booking and Night modes, the temperature setting range is: 35℃~the maximal adjustable temperature 55℃, the acquiescence maximal temperature is 50℃.

(4) Available Hot Water Volume

The water volume can be display in real time, there are five sections of water volume: 100%, 80%, 60%, 40%, 20%, when the water volume is less than 20%, it will flicker.



(5) Function Setting of Water Heating


Under on /off status of water heating, the following functions can be set:



Water On/Off	Functions
Start-up Water mode	Sunflower, Auto, Sterilization, Fast, Shield
Start-up Booking mode	Auto, Sterilization, Fast, Shield
Start-up Night mode	Auto, Sterilization, Fast, Shield
Water heating off	Sterilization


Sunflower function: find the highest outdoor temperature by recording the history data of outdoor temperature to define the time to heat the water, so as to achieve energy saving.

Auto function: the setting temperature of water heating will be automatically provided by water heater according to the outdoor ambient temperature, there is no


need to set by the user, and the water temperature cannot be adjusted via  or  buttons.

Sterilization function: it will conduct high temperature sterilization when the water temperature in the water tank is heated to 65~70℃ (adjustable) within the required set time. Press the  button to enter the sterilize page,when the high temperature sterilization is set to be “once”, then the sterilization will be valid for once; when the high temperature sterilization is set to be “circular”, the sterilization will be circularly valid, then it can set the circulated days and presetting sterilization time. When the sterilization function is activated, the icon will flicker.

Fast function: start up the compressor and electric heating water under the allowable conditions of outdoor unit, it displays ,the fast water heating function can be set to be valid for once, when the water tank/hot water generator has reached to heat preservation status, it displays ,the fast water heating function will be cancelled for energy saving. After the water heating is closed down, the fast water heating function is cancelled.

Shield function: it can conduct shield function by pressing  of wired controller to nullify such operation.

(6) Malfunction View

When the water heater fails to function well, press  to view the information of malfunctions.

3.3.2 Floor control parameter

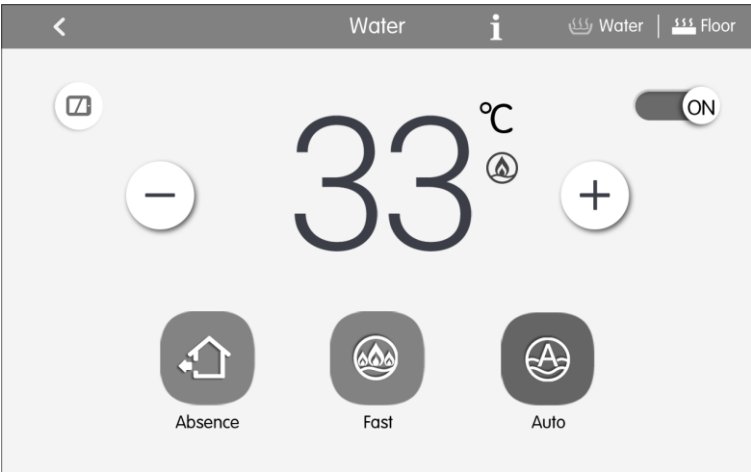




Fig. 3.5Page of Floor Heating Control

(1) On/off

Press the on/off button to turn unit on or off.

When the unit is off, the mode and temperature cannot be set.

(2) Temperature Setting



It displays the current water yielding temperature as default. The temperature value will turn to the setting temperature and can be adjusted by pressing  and  buttons; the temperature value will increase or decrease by every pressing the button for once. The temperature value will be continuously increased or decreased by long pressing the button. After 5 seconds without any action, the temperature value will turn back to the current water yielding temperature.

Floor heating water yielding temperature range: 25℃~the highest water yielding temperature of floor heating 45℃.

(3) Function Setting of Floor Heating


Under the on/off status of floor heating, the functions can be set as below:

Floor on/off	Function	Remarks
Floor on	Auto, Fast, Absence, Shield	
Floor off	Absence	It will be valid only when the indoor unit is set together with shunt valve


Auto function: the floor heating water yielding temperature will be automatically provided by hot water generator according to the outdoor ambient temperature, there is no need to set by the user, and the water temperature cannot be adjusted via  or  buttons.

Fast function: start up the compressor and electric heating under the allowable conditions of outdoor unit.

Absence function: when the user is absence, it will maintain certain degree of water temperature to prevent the pipelines from being frozen up and prevent the indoor equipment from being destroyed.

Shield function: it can conduct shield function by pressing  of wired controller to nullify such operation.

(4) Malfunction View

When the floor heating fails to function well, press  button to view the information of malfunctions.

3.4 e-Control Function

On the home page, pressing e-Control button can enter the page of e-Control.

e-Control includes 5 short-cut modes (Sleep, Bath, Home, Leaving and Stay out) and 3 DIY modes.

User may reset the functions of different modes according to actual needs.

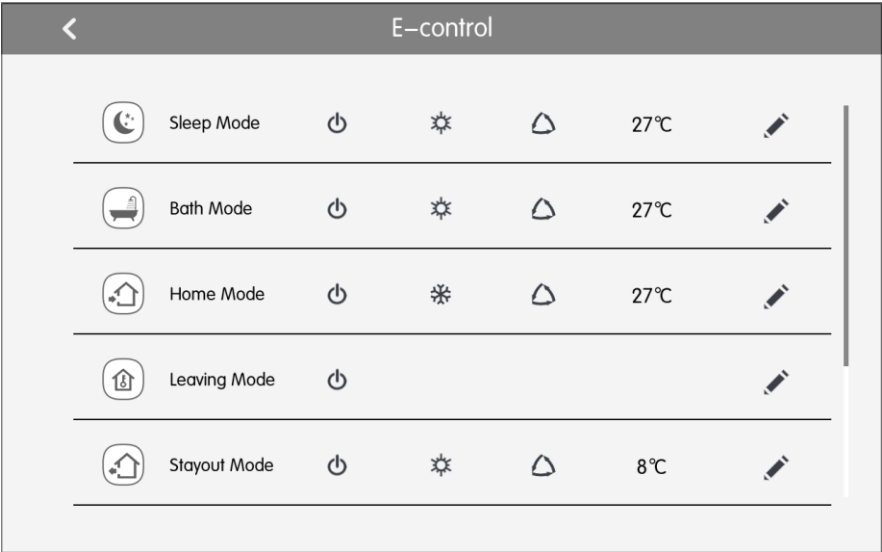



Fig.3.5 e-Control Page

(1) Turn on e-Control

Pressing the zone button can turn on the selected short-cut mode.

Note: e-Control can be turned on repeatedly. When it is turned on, centralized controller will send out one control order according to the mode setting.


(2) Edit e-Control

Press  to edit the mode parameters.

Settings of mode parameters are the same as single unit control.

After setting is done, press  to save the setting.

(3) Add equipment

On the edition page, press  and then the page of equipment selection will pop in.

User can set the indoor unit that works according to the current modes. Pressing the icon of indoor unit can select or cancel the unit. Press ✓ to save the setting.

Note: For a same indoor unit, different modes can be set at the same time. In this case, indoor unit will work according to the latest energized mode.

(4) Restore default settings

On the edition page, press the “Reset Default” button to restore the ex-factory default settings.

Ex-factory default settings:




Mode	Subject	On/off	Mode	Set temp	Fan speed	Swing	Function
Sleep	All IDUs	On	Heat	27℃	Auto	Off	Turn on sleep function
Home	All IDUs	On	Cool	27℃	Auto	Off	--
Leaving	All IDUs	Off	--	--	--	--	--
Stayout	All IDUs	On	Heat	8℃	Auto	Off	Turn on the stay-out function
Bath	All IDUs	On	Heat	27℃	Auto	Off	--
DIY	All IDUs	On	Heat	27℃	Auto	Off	--

3.5 Group Control


Press the IDU button on the home page to enter the page of group function.




Fig.3.7 Group Page


No.	Name	Instructions
①	Group display	Display in separate page the list of groups that are controlled by the centralized controller. Sliding up or down can turn over the page.
②	Group names	Display the names of every group.
③	Add group button	Press the button to add a group.
④	Group control button 	Press the button to enter the group control page.
⑤	Group edit button 	Press the button to enter the group edit page.
⑥	IDU sort button 	Press the button to enter the group sort page.

(1) Group control


Press the  button to enter the page of group control. Control parameters are the same as single unit control.

Press button  to send out the group control order.

(2) Edit group


Press  to enter the page of group editing.

Use can set the group name and add indoor units to the group.

Press  to save the setting.


Note: 1 set of indoor unit can be set in up to 5 groups

(3) IDU sort


Press the  button to enter the IDU sort page.

Select one indoor unit, press the left of right button at the bottom of the screen to switch the display of the indoor units.

(4) Add group

Press the “ADD ” button to add new groups. Then the page of group editing will pop in. User can set the group name and add indoor units to the group.

(5) Delete group

Press  to delete the selected group.

3.6 Schedule Management

Press Schedule button on the IDU home page to enter the page of schedule management.

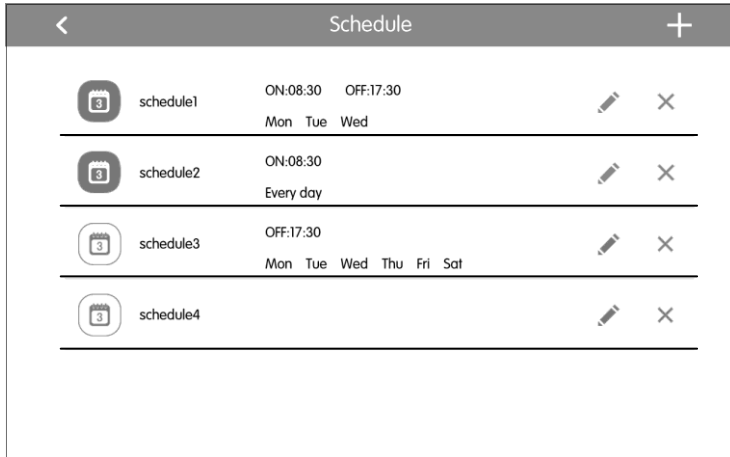


Fig.3.8 Schedule Home Page

(1) Open the schedule


Press the zone button to open or close the schedule.

When the icons and texts turn blue indicating the schedule is open.

When the icons and texts turn grey indicating the schedule is closed.

When schedule is open, centralized controller will send out the control order automatically according to the time and parameters set by the schedule.

(2) Edit schedule

Press  to enter the page of schedule editing.

×

Schedule Edit

✓

Name: schedule1

Temp Setting

☒ ON:08:30

☒ OFF:17:30

Repeat Setting


Add Unit

Mode Setting

Exception Setting

Enter schedule name:

Fig.3.9 Page of Schedule Editing

Press  to save the schedule setting.

- 1) Setting method of schedule control parameters is the same with that of the single indoor unit control.
- 2) Add equipment

Press the “Add Unit” button to enter the page of equipment selection. User may set the indoor unit that works according to the current schedule.

Note: For a same indoor unit, different schedules can be set at the same time. In this case, unit will work according to the schedule setting that is previously energized.

- 3) Repeat schedule

Press “Repeat Setting” button to enter the setting page. User can set the schedule work repeatedly according to weeks.

- 4) Time setting

Press the “ON Time” or “OFF Time” button to enter the page of time setting.


User can set the time for unit to turn on/off automatically.

Note: The time to activate or stop unit can be set at the same time, but they must not be the same.

- 5) Add exception

Press the “Exception Setting” button to enter the setting page of schedule exception.


The calendar will pop in, user can select the date to activate or cancel exception.

Press  to save the selected date.

Notes: When schedule exception has been set, air conditioner will not execute the control order on the exception date set by the schedule.


User may add several exception dates.

(3) Add schedule

Press  to add new schedules. Then the schedule editing page will pop in for user to set relevant parameters.

Note: User may add up to 28 schedules.

(4) Delete schedule

Press  to delete the selected schedule.

3.7 Local Setting

Press Setting on the home page to enter the setting page.

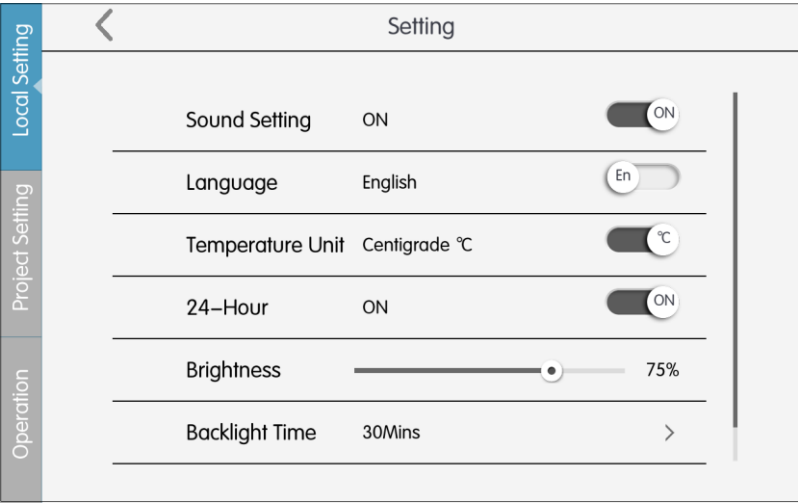


Fig.3.10 Setting Page

Press the “Local Setting” button to switch to the setting options of the current unit.

Select the needed option at the left side column. Sliding up and down can turn over the page.

Set the corresponding content at the right side.

Local setting includes:

Sound, language, temperature unit, time format, mutual exclusion

Press the button to select one kind of setting.

(1) Time setting

Set the date and time of the centralized controller system, can also set the VRF unit time if needed.

(2) User password

Press the button can activate or inactivate user password.

When password is activated, it can be set or changed in 4~10 numbers or characters. Original password is blank.

Press the button  to save the password.

Note: If user password is activated, user needs to input password to enter the control page when centralized controller is turned on or activated.

(3) Backlight setting

Pressing this button can set the timeout period of screen backlight. Screen will be shut off and the centralized controller will enter sleep mode when the timeout period is over.

Note: When centralized controller is in sleep mode, use can wake it up by touching any part of the touch screen or the touch button at the right bottom of the screen.

(4) Brightness

Pressing or dragging the sliding bar can adjust the backlight degree.

(5) Customer Service

User can set the name and phone number of the local customer service center for the convenience of acquiring immediate solutions and technical support.

Press the  button to save the setting.

(6) Restore default settings

Press the “Reset” button to restore local setting, e-Control setting, group setting, schedule setting, names and icons of indoor units, and other relevant ex-factory default settings.

- 1) When switching between indoor network and outdoor network, or reset unit IP, restore the ex-factory setting for centralized controller.
- 2) After debugging for the centralized controller is finished, connect in to the network. If connect the centralized controller to the network during debugging process, it needs to restore the defaulted ex-factory setting.

3.8 Engineering Setting

On the home page, press setting to enter into setting interface.

Press the “Project Setting” button to switch to engineering setting, the operation method is the same as the setting of this unit.

(1) Indoor unit register

Enter into the indoor unit register interface, select the chosen indoor unit according to the displayed engineering No. of indoor unit icon, and then press ✓ to save, it will display the registered indoor unit in the home page.

Notes: There are 32 sets of indoor units can be registered at most.

(2) Name&Icon setting

Switch to name&Icon setting interface to select the engineering No., and set the name and icon of indoor unit.

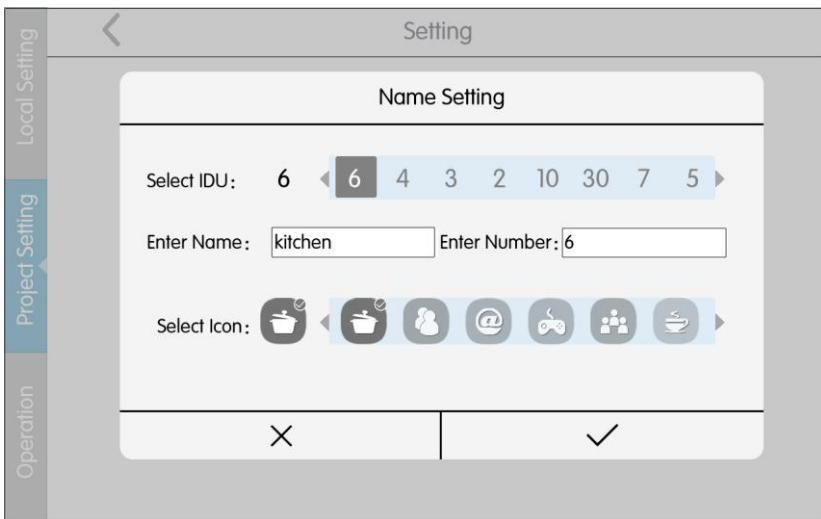


Fig. 3.11 Setting Page of Indoor Unit

Press the Engineering No. to select the required indoor unit that needs to be set.

(1)Name: can input number or letter (it should not be over 10 letters)

(2)Icon: press to select the preset icon.

(3)Engineering No.: it can be set to be 1-255.

(4)Press ✓ button to successfully save the setting. Then the indoor unit list in the home page will display the new name and icon of indoor units.

3.9 Operation Notice

Press Setting on the homepage to enter the setting page.

Press the “Operation” button to switch to operation notice. The operation method is the same with that of the local setting.

On the page of operation notice, user can view the information of the local unit, customer service information, operation instructions and other notices.

GREE ELECTRIC APPLIANCES, INC. OF ZHUHAI

Add: West Jinji Rd, Qianshan, Zhuhai, Guangdong, China, 519070
Tel: (+86-756) 8522218 Fax: (+86-756) 8669426
E-mail: gree@gree.com.cn www.gree.com

